



Once you do that, then pull picker back until FWD pin contacts FWD side of tail wheel, straighten out and start to lift the Picker up..., this should raise the tail wheel off the ground a little. ...Gently push or pull the aircraft.

## BASIC OPERATION OF ALL TAIL PICKERS